





 



 
## Conique





Type	Ø a mm	N° de commande
 RT 1	0,2	T005 44 601 99
 RT 1NW*	0,1	T005 44 625 99
 RT 2	0,8	T005 44 602 99

Type	Ø a mm	N° de commande
 RT 1MS	0,2	T005 44 614 99
 RT 1NWMS*	0,1	T005 44 625 71
 RT 2MS	0,8	T005 44 617 99
 RT 12MS 25°	0,5	T005 44 632 99
 RT 13MS 30°	0,4	T005 44 633 99

## Panne pour dépôt de métal





Type	Ø a mm	b mm	N° de commande
 RT 10GW	1,2	2,0	T005 44 610 99

Type	Ø a mm	b mm	N° de commande
 RT 10GWMS	1,2	2,0	T005 44 624 99


## Couteau



Type	Ø a mm	N° de commande
 RT 7 45°	2,2	T005 44 607 99

Type	Ø a mm	N° de commande
 RT 7MS 45°	2,2	T005 44 621 99

## Panne de calibrage

Type	N° de commande
 Panne de calibrage	T005 44 613 99

Panne de calibrage: mise à la terre séparée

\* Non mouillable